
A-type clamp installation steps

Sections not to scale

ERTC


KALOT GROUP · TECHNICAL ILLUSTRATION · NOT TO SCALE

5. Checking

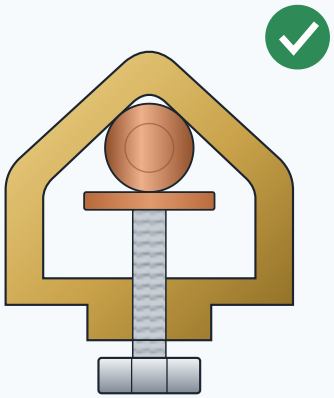


The full tape width must sit under the screw tip and on the earth rod; make the tape bend outside the clamp.

4. Tighten the screw

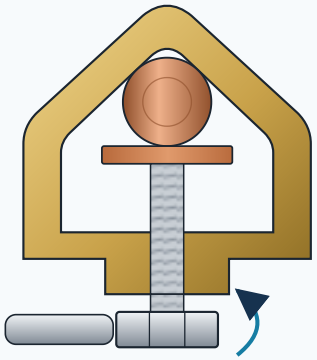


Tighten the screw with a spanner to the manufacturer's instructions until the tape is pressed fully onto the earth rod.

3. Place the tape

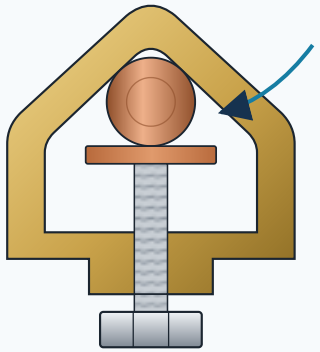


Place the tape beside the earth rod, between it and the screw tip, flat face towards the earth rod.

2. Drop the clamp over the earth rod

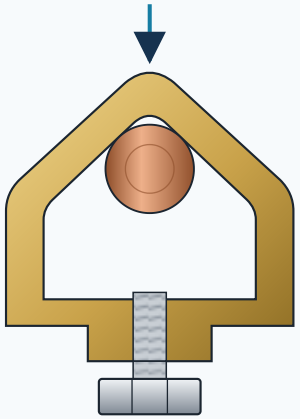

Loosen the screw and drop the clamp over the earth rod from above so the earth rod sits in the loop apex.

1. Cleaning

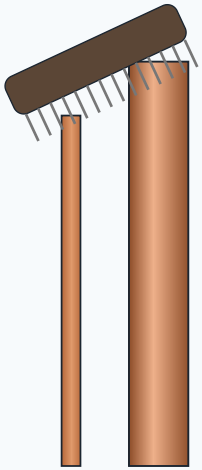

Clean the top of the earth rod and the part of the tape that sits under the clamp with a wire brush.

Views are taken along the earth rod axis. At periodic inspection, if you find loosening or corrosion, open, clean and refit the joint; to measure earth rod resistance, loosen the screw and retighten it after the measurement.

This document is not contractual; we may update product design, dimensions, weights and images without prior notice.

گروه کالوت
KALOT GROUP
Protect Today For Tomorrow
Since: 1972 تاسیس: ۱۳۵۱
www.kalot.ir · Tel +98 21 2268 8852