
G-type clamp installation steps

Views not to scale

ERCC


KALOT GROUP · TECHNICAL ILLUSTRATION · NOT TO SCALE

1. Cleaning

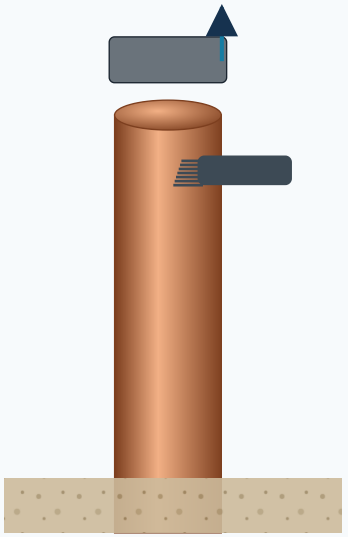


Remove the driving head and clean the earth rod top and the conductor with a wire brush.

2. Seating the clamp

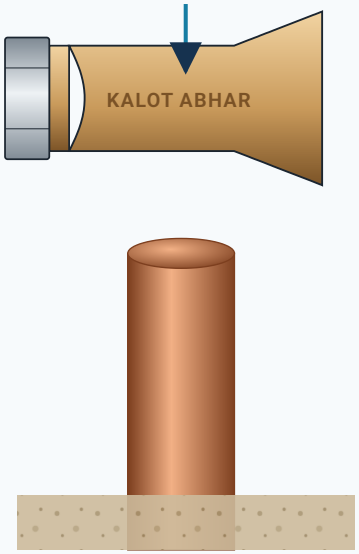


Loosen the bolt and slide the clamp onto the earth rod from its top; the earth rod sits on the bolt side.

3. Thread the conductor

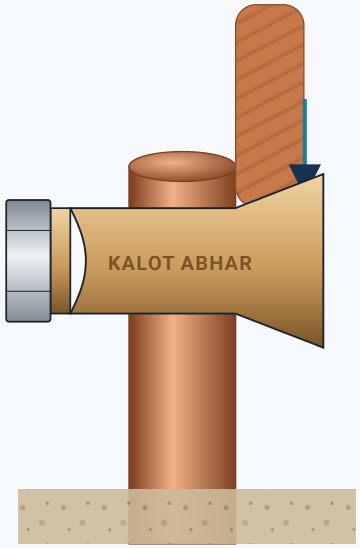


Thread the conductor through the clamp opening beside the earth rod so it sits in the V-shaped end.

4. Tighten

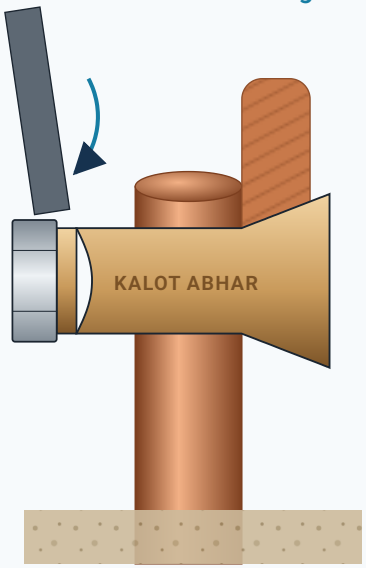

Tighten the bolt to the manufacturer's instructions so the conductor is pressed between the earth rod and the body.

5. Checking

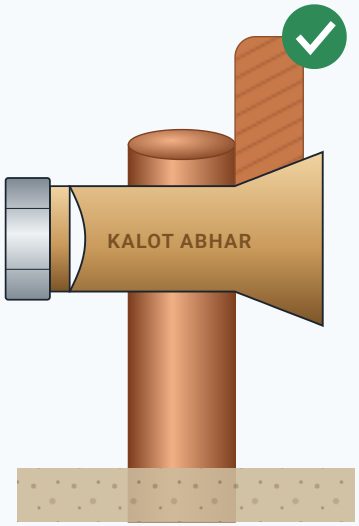

The clamp must not move on the earth rod; the joint stays accessible in the pit.

Views are from the side of the earth rod; the clamp body lies horizontally around the earth rod and conductor, and the bolt bears on the earth rod through the body boss.

This document is not contractual; we may update product design, dimensions, weights and images without prior notice.

گروه کالوت
KALOT GROUP
Protect Today For Tomorrow
Since: 1972 تاسیس: ۱۳۵۱
www.kalot.ir · Tel +98 21 2268 8852