

Testing the earthing system with the conductor-to-tape clamp in three steps

Temporary disconnection of the down conductor from the earthing system for measurement and periodic inspection

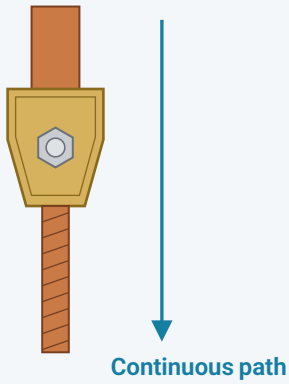


1 Normal state: closed

The clamp is closed, and lightning current flows from the down conductor to the earthing system.

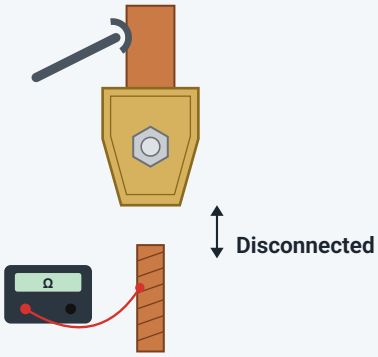

2 Open and measure

Loosen the nut with a spanner and remove the round conductor, then measure the earthing system resistance with an earth tester.

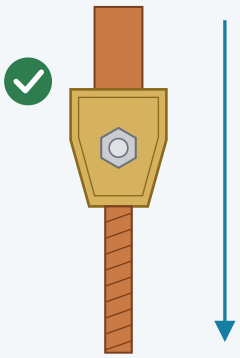

3 Close again and check

Put the round conductor back in place, tighten the nut and check the continuity of the path.

This document is not contractual; we may update product design, dimensions, weights and images without prior notice.