
A-type clamp installation schematic: tape to earth rod connection


Not to scale

a) Installed view

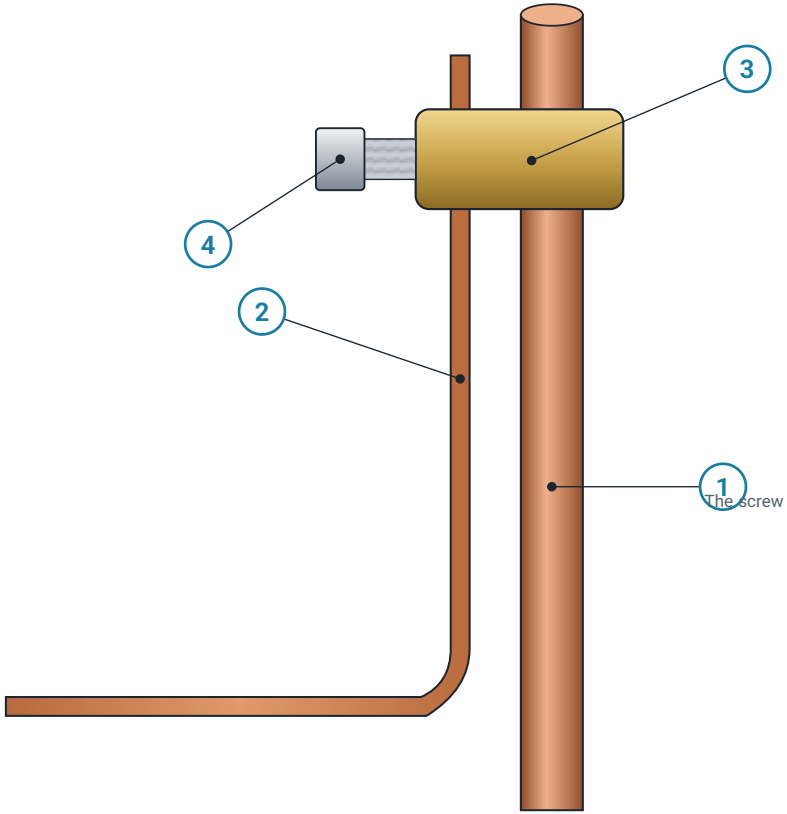

b) Top section

The screw presses the tape onto the earth rod

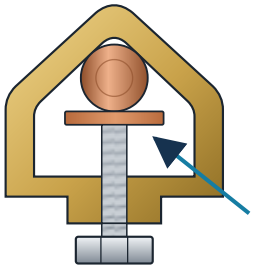

Installation notes

1. The clamp drops over the earth rod from above; the earth rod sits in the loop apex.
2. The tape lies beside the earth rod, between it and the screw tip, flat face towards the earth rod.
3. The screw is tightened with one spanner to the manufacturer's instructions.
4. The full tape width sits under the screw tip and on the earth rod; the tape bend is outside the clamp.
5. The joint stays inside the inspection pit and accessible.

Key

- Earth rod (1)
- Copper tape (2)
- Brass clamp body (3)
- Stainless steel screw (4)

This document is not contractual; we may update product design, dimensions, weights and images without prior notice.

گروه کالوت
KALOT GROUP
Protect Today For Tomorrow
Since: 1972 تاسیس: ۱۳۵۱
www.kalot.ir · Tel +98 21 2268 8852