
Reinforcing bar bonding plate with conductor installation schematic

Not to scale

70 × 40 · 2 × M10 · Cu 70 mm² · 1 m

KALOT GROUP · TECHNICAL ILLUSTRATION · NOT TO SCALE

b) Wall face view

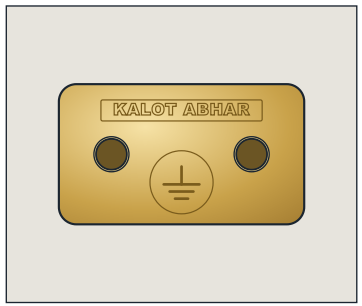

a) Concrete wall section

Installation notes

1. Strip the sheath from the free end of the conductor to the length of the clamp.
2. Fix the plate face to the inside face of the formwork, for example with two M10 bolts from behind the formwork, which also seal the threads.
3. Run the conductor to the nearest reinforcing bar and fix its bare end with a U clamp; the concrete cover must be complete.
4. After pouring, remove the formwork bolts and fix the cable lug with an M10 bolt; tighten to the manufacturer's instructions.
5. Measure and record the electrical continuity between the plate and the earth bar.

Key

Bonding plate	1	Factory bush	2
Yellow and green conductor in the concrete	3	U clamp on reinforcing bar	4
Earth conductor with cable lug	5	Earth bars	6

This document is not contractual; we may update product design, dimensions, weights and images without prior notice.

گروه کالوت
KALOT GROUP
Protect Today For Tomorrow
Since: 1972 تاسیس: ۱۳۵۱
www.kalot.ir · Tel +98 21 2268 8852