
Reinforcing bar bonding plate with conductor installation steps

Views not to scale

70 × 40 · 2 × M10 · Cu 70 mm² · 1 m


KALOT GROUP · TECHNICAL ILLUSTRATION · NOT TO SCALE

6. Measure

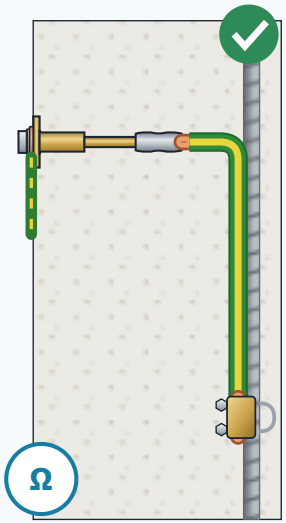


Measure and record the electrical continuity between the plate and the earth bar.

5. Fit the cable lug

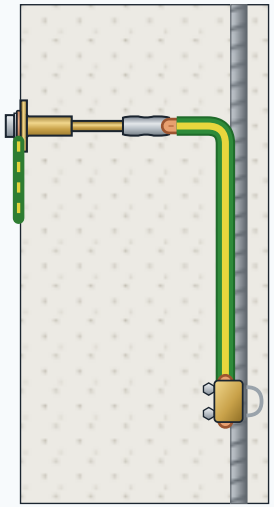


Fix the cable lug with the M10 bolt and tighten it to the manufacturer's instructions.

4. Pour the concrete

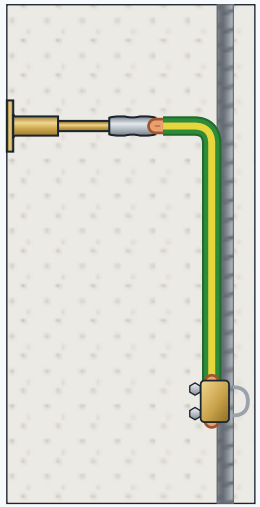


Remove the formwork bolts and strip the formwork; the plate stays flush with the concrete.

3. Connect to the reinforcement

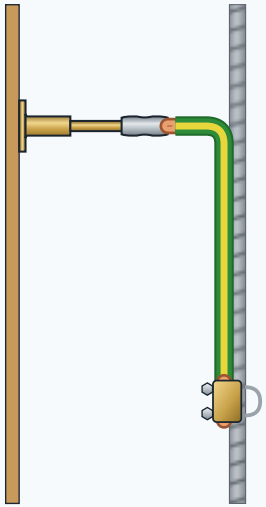


Fix the bare end of the conductor to the nearest reinforcing bar with a U clamp.

2. Fix to the formwork

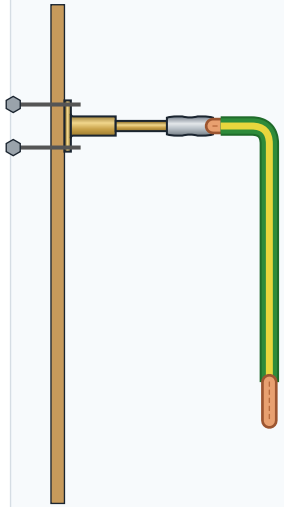

Fix the plate face to the inside face of the formwork, for example with two M10 bolts from behind the formwork.

1. Prepare the conductor



Strip the sheath from the free end of the conductor to the length of the clamp.

This document is not contractual; we may update product design, dimensions, weights and images without prior notice.

گروه کالوت
KALOT GROUP
Protect Today For Tomorrow
Since: 1972 تاسیس: ۱۳۵۱
www.kalot.ir · Tel +98 21 2268 8852