
Two-piece brass air rod base: installation steps

Installation on a flat roof in four steps

ARCS 1650 · 1670 · 1695 · 2050 · 2070 · 2095


KALOT GROUP · TECHNICAL ILLUSTRATION · NOT TO SCALE

4

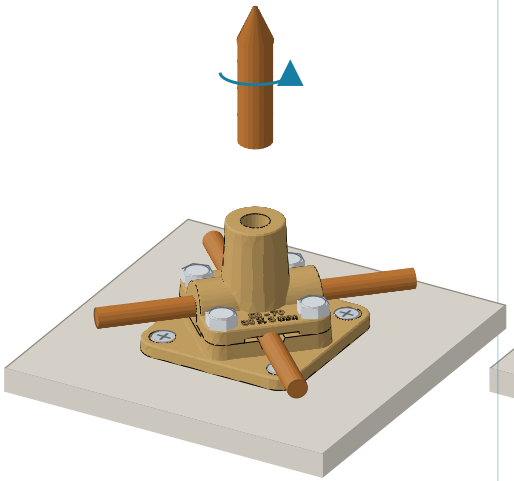


Fix the air rod in the body thread
and tighten it firmly.

3

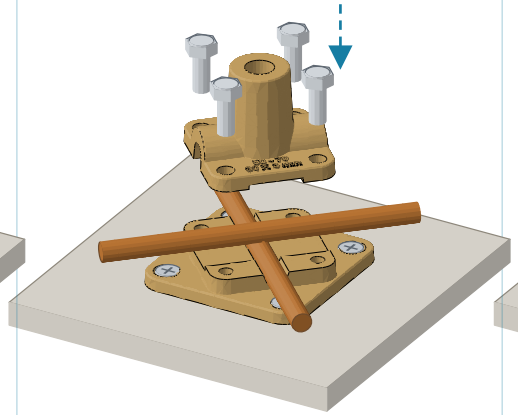


Fit the upper body and tighten the four
M8 bolts evenly in a cross pattern.

2

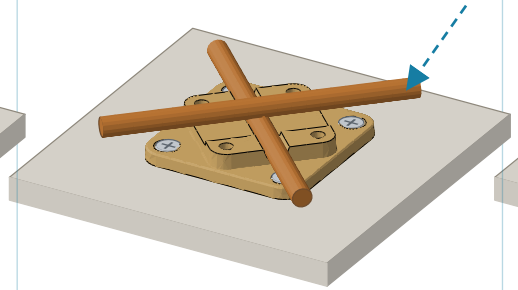

Lay the round conductor in the arch or groove;
for three-way and four-way, the second at right angles.

1

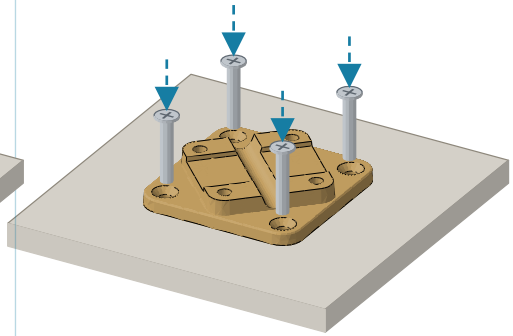

Fix the lower plate to the roof with four
countersunk screws.

This document is not contractual; we may update product design, dimensions, weights and images without prior notice.

گروه کالوت
KALOT GROUP
Protect Today For Tomorrow
Since: 1972 تاسیس: ۱۳۵۱
www.kalot.ir · Tel +98 21 2268 8852