
# C clamp installation steps

Sections not to scale

CCC


KALOT GROUP · TECHNICAL ILLUSTRATION · NOT TO SCALE

### 5. Checking

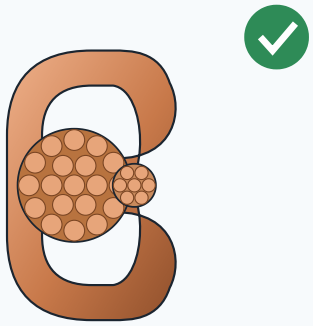


Check that the C is fully closed and both conductors are held firmly.

### 4. Crimping with a matching die

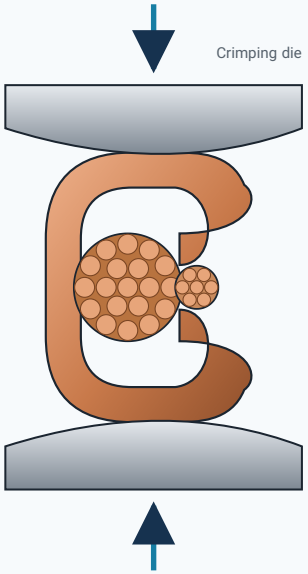



Place the clamp in the centre of the crimping tool die and crimp until the jaws fully meet.

### 3. Placing the branch conductor

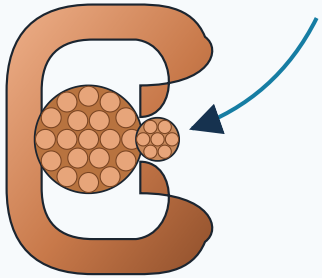


Place the branch conductor in the smaller part of the C, next to the main conductor.

### 2. Fitting on the main conductor

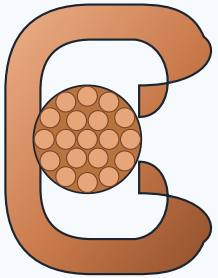

Place the C clamp on the main conductor; the main conductor is not cut.

### 1. Cleaning

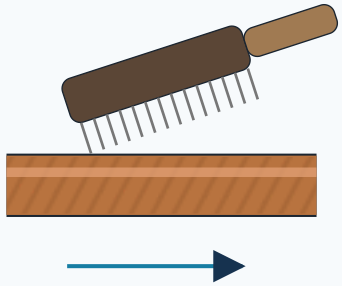

Clean the strands of both conductors with a wire brush down to bright copper.

On long C clamps, make a second crimp next to the first with a slight overlap. A crimped connection does not need retightening.

This document is not contractual; we may update product design, dimensions, weights and images without prior notice.

گروه کالوت
KALOT GROUP
Protect Today For Tomorrow
Since: 1972 تاسیس: ۱۳۵۱
www.kalot.ir · Tel +98 21 2268 8852