
Installation steps of the SBRC 2030 foundation earthing/bonding clamp

Views not to scale

SBRC 2030


KALOT GROUP · TECHNICAL ILLUSTRATION · NOT TO SCALE

4. Tighten and check

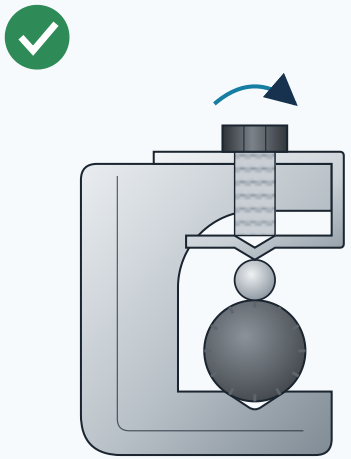


Tighten the screw with a spanner to the manufacturer's instructions and check that the conductor and reinforcing bar are held firmly.

3. Conductor position

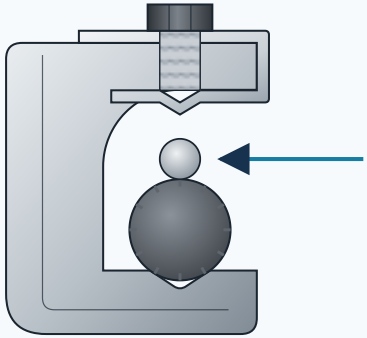


Lay the conductor (round conductor, copper conductor or tape) parallel or perpendicular to the reinforcing bar, on top of it and under the pressure jaw.

2. Seating the clamp

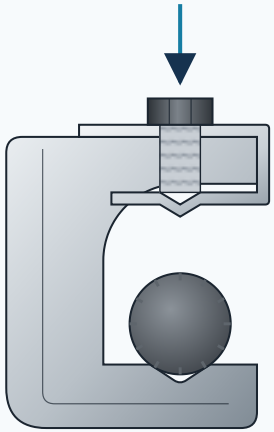

Loosen the bolt and place the clamp frame on the reinforcing bar from above, so the bar sits in the V groove at the bottom of the jaws.

1. Connection point

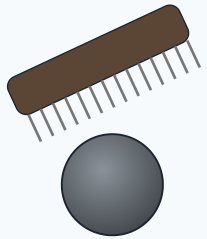

Choose the connection point on the reinforcing bar and clean mud, cement slurry and rust from the contact faces of the reinforcing bar and conductor.

Views are along the reinforcing bar; the dark circle is the reinforcing bar and the light circle the conductor. The joint is made and inspected before concrete is poured.

This document is not contractual; we may update product design, dimensions, weights and images without prior notice.

گروه کالوت
KALOT GROUP
Protect Today For Tomorrow
Since: 1972 تاسیس: ۱۳۵۱
www.kalot.ir · Tel +98 21 2268 8852