
Four-way conductor-to-tape clamp: exploded view

Order of parts and assembly direction · not to scale

CTCX 050 · CTCX 070 · CTCX 095

KALOT GROUP · TECHNICAL ILLUSTRATION · NOT TO SCALE

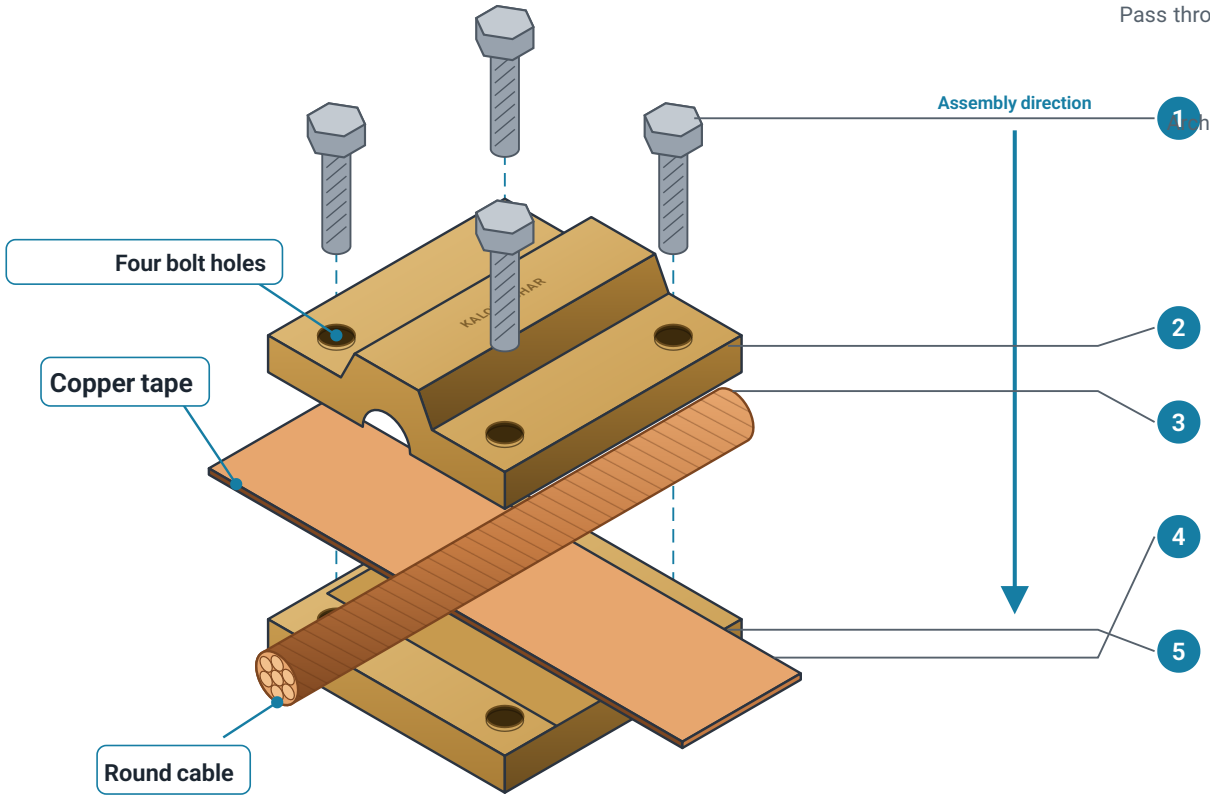

Parts in assembly order (from top)

Four stainless steel bolts 1

Pass through the upper part and clamp the two parts together

Brass upper part 2

Notched conductor channel under the “KALOT ABHAR” boss

Bare stranded copper conductor 3

Along the upper part's channel

Copper tape 4

At right angles to the conductor, in the lower part's groove

Brass lower part 5

With a shallow groove to seat the tape

Final assembly direction:

The tape sits in the lower part's groove with the conductor on top; the upper part sits on the conductor and the four bolts are tightened evenly along the dashed lines so both conductors are held between the two parts.

The exploded view is schematic.

Part spacing only shows the assembly order.

This document is not contractual; we may update product design, dimensions, weights and images without prior notice.

گروه کالوت
KALOT GROUP
Protect Today For Tomorrow
Since: 1972 تاسیس: ۱۳۵۱
www.kalot.ir · Tel +98 21 2268 8852