
Galvanised earth rod installation schematic

Direct driving, borehole installation with GIM and several parallel earth rods; with earth pit and galvanised U clamp


GALVANIZED STEEL EARTH ROD · GVER · HOT-DIP 50–70 µm · Ø16 · Ø20

KALOT GROUP · TECHNICAL ILLUSTRATION · NOT TO SCALE


Several parallel earth rods

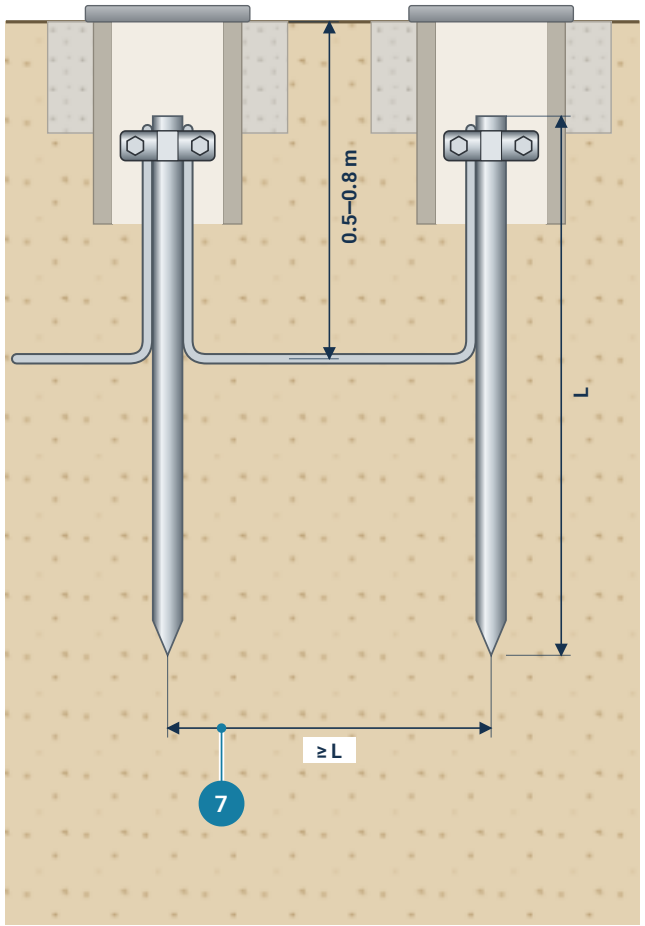

Borehole installation with GIM

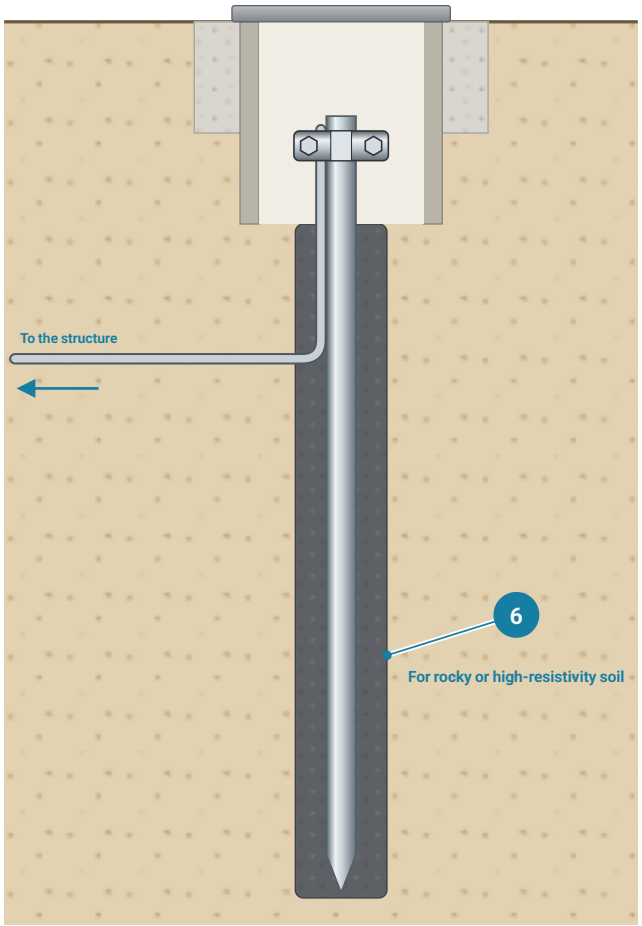

Direct driving

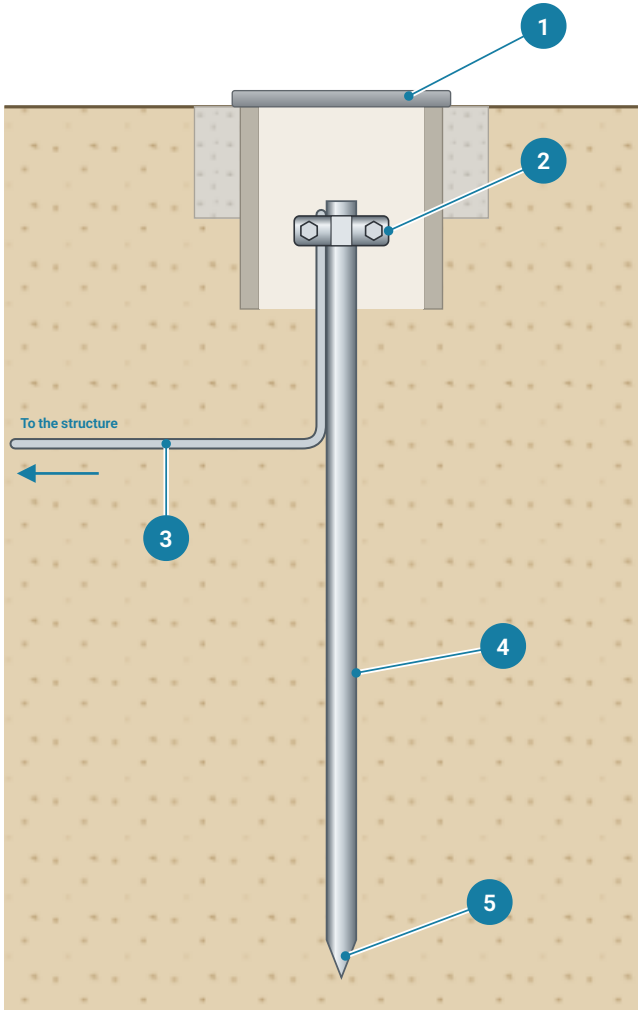

1. Earth pit with cover; concrete is poured around it
2. Galvanised U clamp on the earth rod top, inside the pit
3. Galvanised steel conductor (tape or round wire as designed) at 50 to 80 cm depth
5. Pointed end; opens the way through the soil
6. Borehole filled with GIM
7. Spacing between two earth rods at least length L, ideally twice the depth

The schematic is illustrative and not to scale; all conductors and clamps are galvanised.

We keep improving our products; please confirm final dimensions with our experts.

This document is not contractual; we may update product design, dimensions, weights and images without prior notice.

گروه کالوت
KALOT GROUP
Protect Today For Tomorrow
Since: 1972 تاسیس: ۱۳۵۱
www.kalot.ir • Tel +98 21 2268 8852