
Installation steps for the galvanised clamp for tape to earth rod and round wire

Views not to scale

TRCG 3016


KALOT GROUP · TECHNICAL ILLUSTRATION · NOT TO SCALE

1. Cleaning

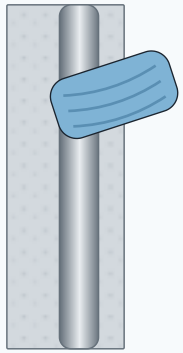


Clean the joint area of mud, cement slurry, rust and grease with a cloth or soft brush; do not scrape off the zinc coating.

2. Opening

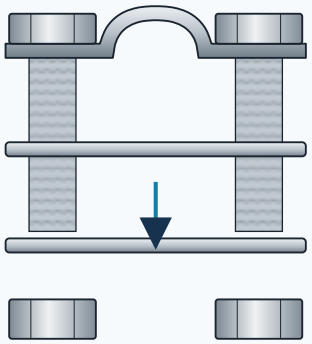


Take the nuts and both flat plates off the bolts; the bolts stay in the saddled plate.

3. Round conductor and middle plate

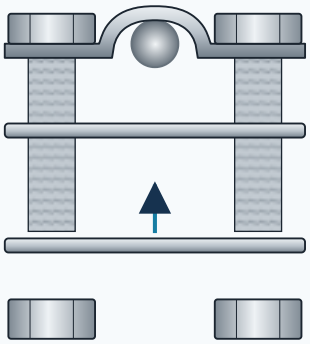


Place the saddled plate over the round conductor and fit the flat middle plate onto the bolts from the other side.

4. Tape and outer plate

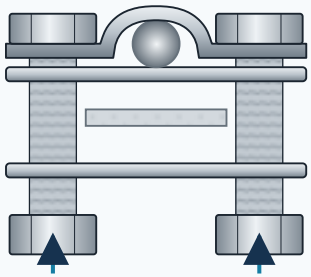

Lay the tape on the middle plate between the two bolts, fit the outer plate and hand-tighten the nuts.

5. Tightening and checking

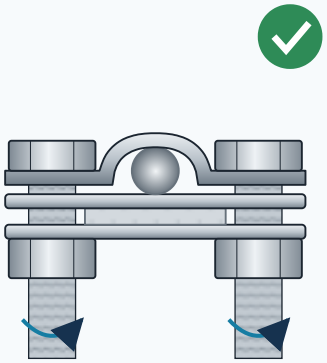

Tighten the nuts evenly and alternately, per the manufacturer's instructions; before concreting, check the concrete cover and take photos.

Views are from the front with conductors shown end-on (sectioned); bolt heads face the saddled plate and the plates slide on along the bolts. The flat middle plate keeps the round conductor apart from the tape. Do not use this clamp with copper conductors.

This document is not contractual; we may update product design, dimensions, weights and images without prior notice.

گروه کالوت
KALOT GROUP
Protect Today For Tomorrow
Since: 1972 تاسیس: ۱۳۵۱
www.kalot.ir · Tel +98 21 2268 8852