Insulated one-hole clip: installation steps


Technical illustration · not to scale · in order from right to left

ICG 035 · ICG 050 · ICG 070 · ICG 095

KALOT GROUP · TECHNICAL ILLUSTRATION · NOT TO SCALE


Technical illustration

3: fixing with one screw

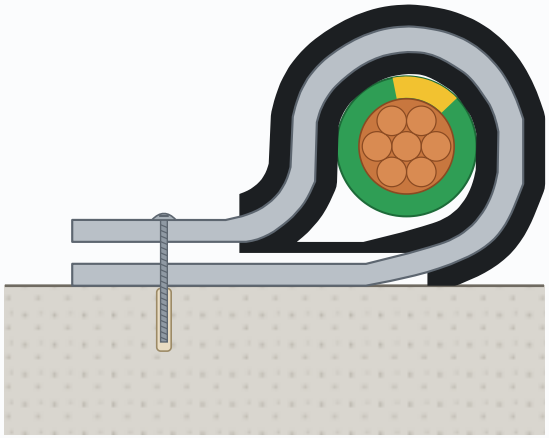


Pass the screw through both tabs and tighten without crushing the sheath.

2: clip around the conductor

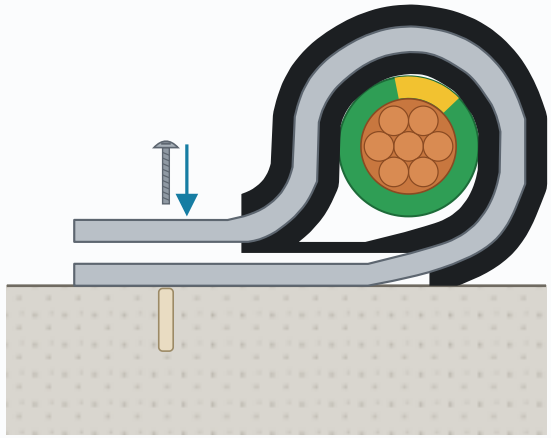

Place the conductor in the loop and hold the two tabs overlapped over the hole.

1: hole and wall plug

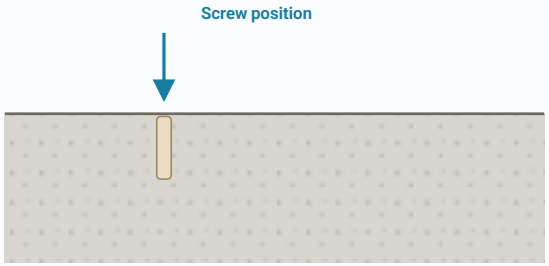

Mark the screw position, drill the surface and insert the wall plug.

This document is not contractual; we may update product design, dimensions, weights and images without prior notice.

گروه کالوت
KALOT GROUP
Protect Today For Tomorrow
Since: 1972 تاسیس: ۱۳۵۱
www.kalot.ir · Tel +98 21 2268 8852