
Two-bolt parallel clamp installation schematic

Front view of the wall, not to scale

PCC

KALOT GROUP · TECHNICAL ILLUSTRATION · NOT TO SCALE

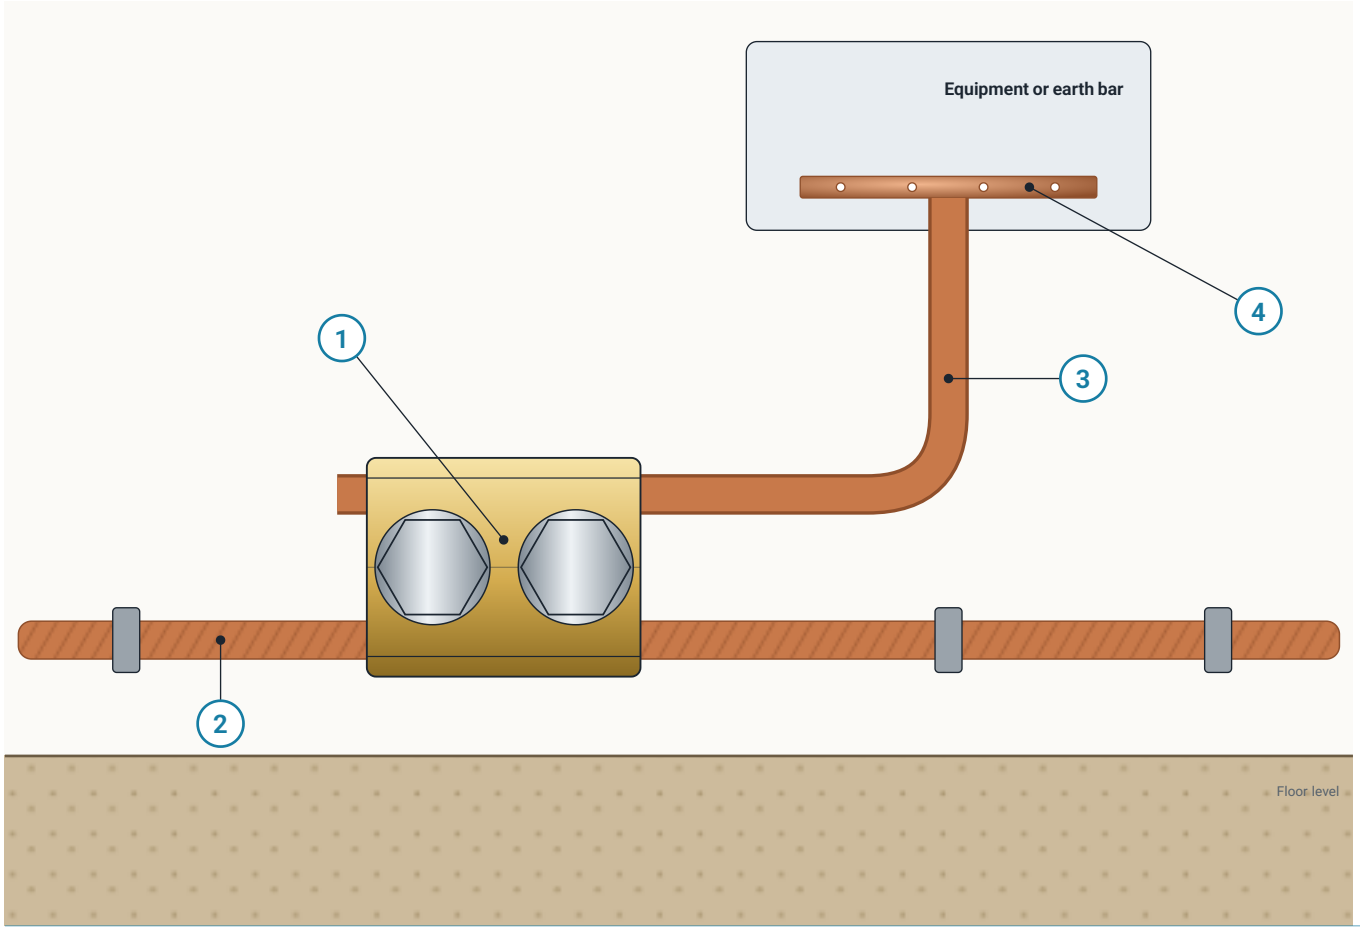

Installation notes

1. The main earthing conductor is not cut; the branch conductor sits beside it in the clamp's second groove.
2. Conductors are cleaned with a wire brush before clamping, and both seat fully in the grooves.
3. The two bolts are tightened alternately and evenly, per the manufacturer's instructions.
4. The clamp is installed in an accessible spot: on a wall, a cable tray or inside an inspection pit.
5. For joints buried in soil, we recommend exothermic welding.

Key

- 1 — KALOT two-bolt parallel clamp
- 2 — Main earthing conductor
- 3 — Branch conductor
- 4 — Equipment earth bar

This document is not contractual; we may update product design, dimensions, weights and images without prior notice.

گروه کالوت
KALOT GROUP
Protect Today For Tomorrow
Since: 1972 تاسیس: ۱۳۵۱
www.kalot.ir · Tel +98 21 2268 8852