
Two-bolt parallel clamp installation steps

Views not to scale

PCC


KALOT GROUP · TECHNICAL ILLUSTRATION · NOT TO SCALE

1. Cleaning

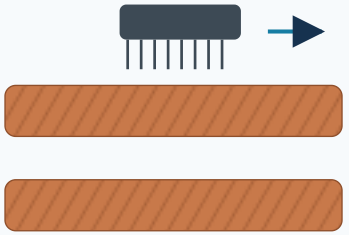


Clean oxide, grease and paint off both conductors at the clamp position with a wire brush.

2. Opening

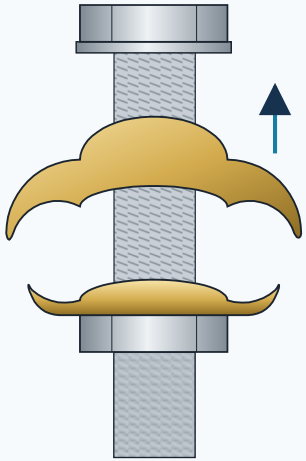


Loosen the nuts so the two plates move apart.

3. Seat the conductors

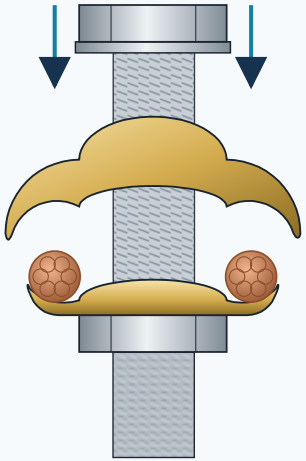

Place the two conductors in the two grooves, one either side of the bolts, until they seat fully.


4. Tighten

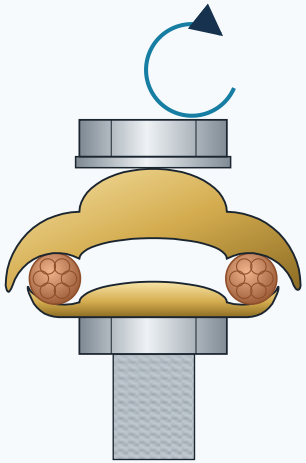

1 ↔ 2 ↔ 1 ↔ 2

Tighten the two bolts alternately and evenly, per the manufacturer's instructions.

5. Checking

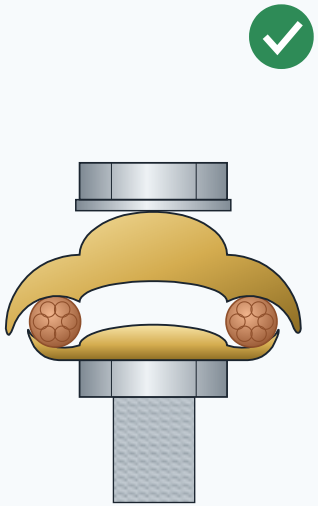

The clamp must not move on the conductors, and the joint must stay accessible.

Views are along the conductors; the two conductors sit in the clamp's two grooves, either side of the bolts. Each clamp has two bolts, tightened alternately.

This document is not contractual; we may update product design, dimensions, weights and images without prior notice.

گروه کالوت
KALOT GROUP
Protect Today For Tomorrow
Since: 1972 تاسیس: ۱۳۵۱
www.kalot.ir · Tel +98 21 2268 8852