
Single-bolt parallel clamp installation steps

Views not to scale

PTEC


KALOT GROUP · TECHNICAL ILLUSTRATION · NOT TO SCALE

1. Drill and clean

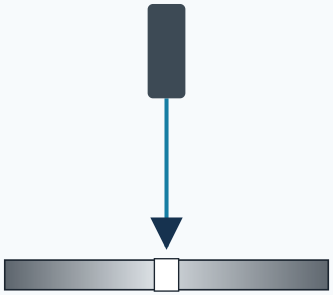


Mark the clamp position, drill a hole to suit the bolt diameter and clean the paint and rust around it back to bright metal.

2. Lower half

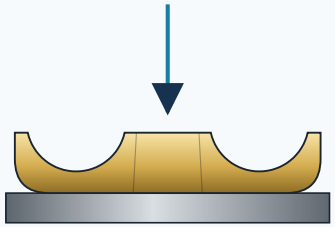


Place the lower half on the structure, aligned with the hole.

3. Two conductors

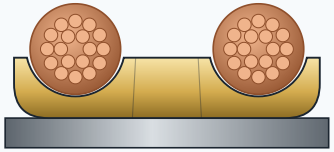


Lay the two conductors in the lower half's grooves, either side of the hole.

4. Upper half and bolt

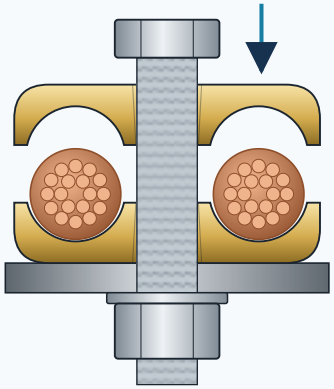

Seat the upper half and pass the bolt through both halves and the structure; fit the washer and nut behind the structure.

5. Tighten and coat

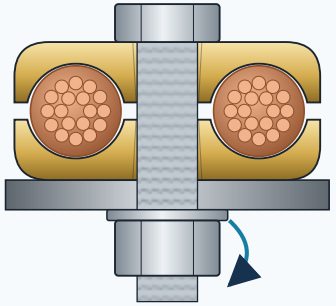

Tighten the bolt per the manufacturer's instructions; on a galvanised structure or outdoors, coat the joint.

Views are along the conductors; the two conductors sit in the clamp's two channels, either side of the bolt. The washer and nut are fitted behind the structure.

This document is not contractual; we may update product design, dimensions, weights and images without prior notice.

گروه کالوت
KALOT GROUP
Protect Today For Tomorrow
Since: 1972 تاسیس: ۱۳۵۱
www.kalot.ir · Tel +98 21 2268 8852