
Raised floor pedestal earth clamp installation steps

Views not to scale


KALOT GROUP · TECHNICAL ILLUSTRATION · NOT TO SCALE

6. Continuity test

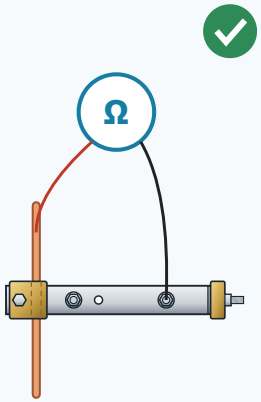


Measure and record continuity of pedestal, conductor and earth bar with a low-resistance ohmmeter.

5. Tighten

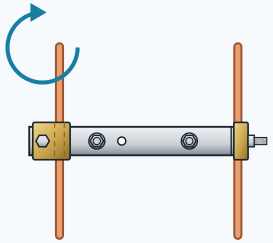


Tighten the clamp bolts and U clamp nuts alternately and evenly to the manufacturer's instructions.

4. Insert the conductor

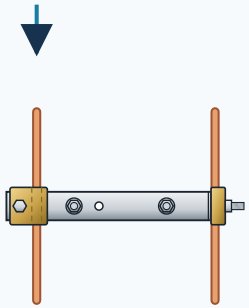


Lay the conductor in the clamp groove, between clamp and strap; the second conductor goes in the bent end clamp.

3. Fit the U clamp

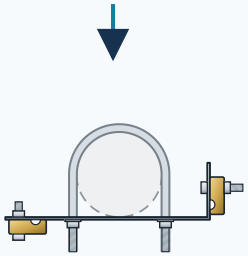


Place the U clamp round the tube from behind, pass it through the strap and hand-tighten the nuts.

2. Clean the spot

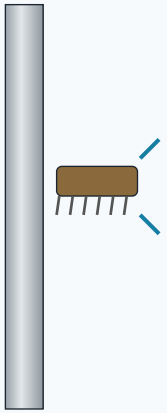

Clean the pedestal tube where the clamp sits; remove paint only at the contact area and as designed.

1. Check the design

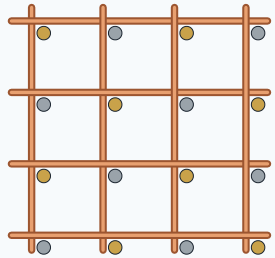

Check the conductor routes, the pedestals to be bonded and the earth bar connection point in the project design.

This document is not contractual; we may update product design, dimensions, weights and images without prior notice.

گروه کالوت
KALOT GROUP
Protect Today For Tomorrow
Since: 1972 تاسیس: ۱۳۵۱
www.kalot.ir · Tel +98 21 2268 8852