
Split bolt installation schematic: branch and parallel joint

Not to scale

SBC

KALOT GROUP · TECHNICAL ILLUSTRATION · NOT TO SCALE

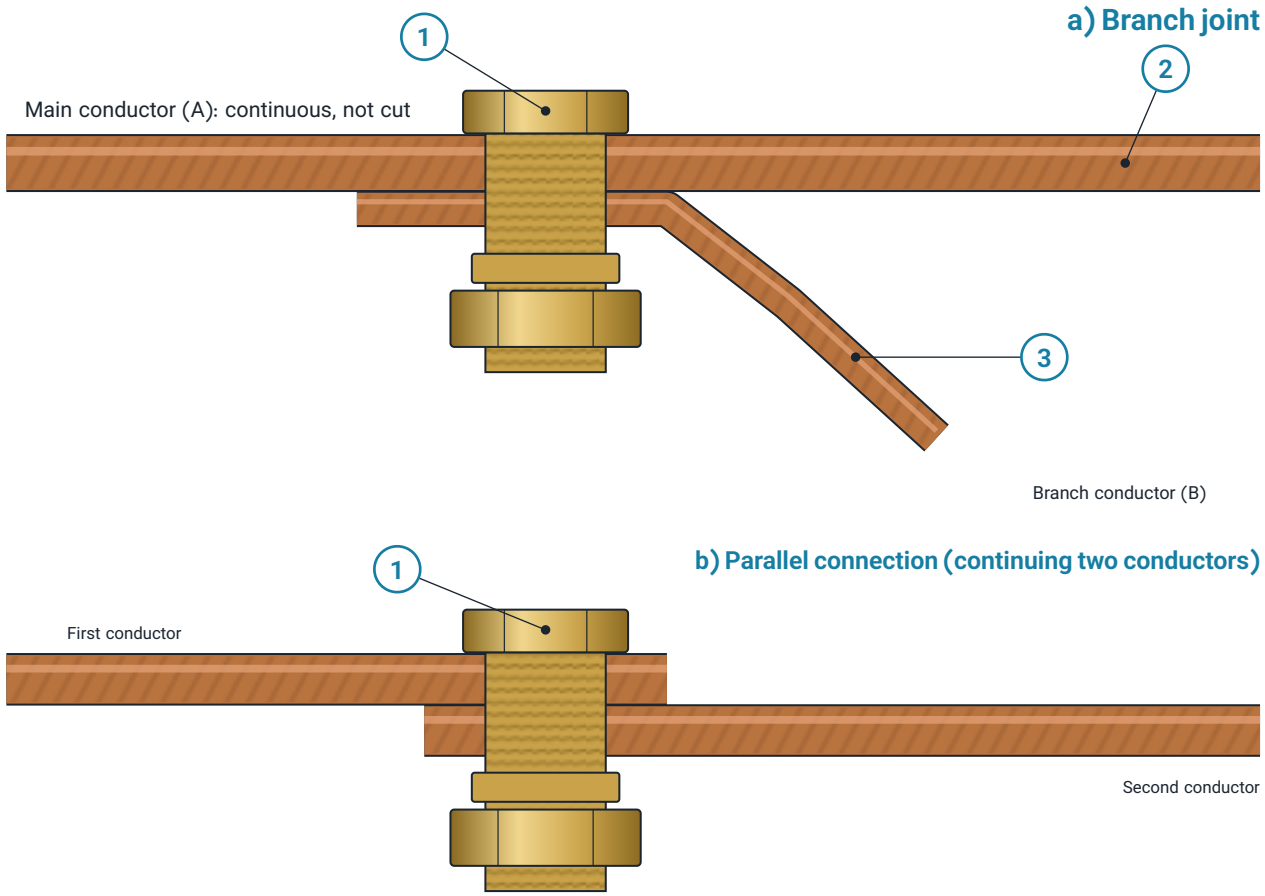

Installation notes

1. Two conductors run side by side through the bolt slot: one from one side and the other from the opposite side.
2. The main conductor is not cut; the branch is clamped beside it.
3. When tightening, hold the body with one spanner and turn the nut with a second spanner.
4. Tighten the nut by hand first, then to the manufacturer's instructions.
5. Install the split bolt where it can be inspected.

Key

1. Brass split bolt
2. Main stranded copper conductor
3. Branch stranded copper conductor

This document is not contractual; we may update product design, dimensions, weights and images without prior notice.

گروه کالوت
KALOT GROUP
Protect Today For Tomorrow
Since: 1972 تاسیس: ۱۳۵۱
www.kalot.ir · Tel +98 21 2268 8852