
Split bolt installation steps

Views not to scale

SBC


KALOT GROUP · TECHNICAL ILLUSTRATION · NOT TO SCALE

5. Checking

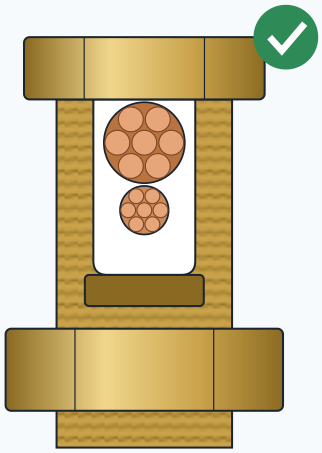


Check that both conductors reach the end of the slot and are fully under pressure.

4. Tighten with two spanners

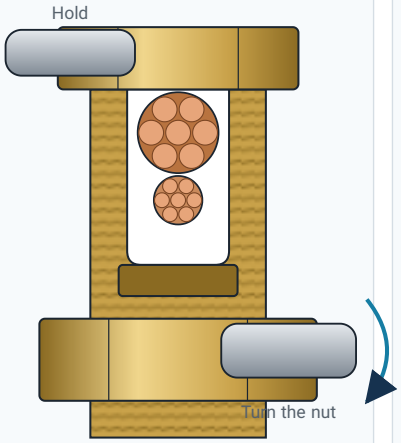


Hold the body with one spanner and tighten the nut with a second spanner to the manufacturer's instructions.

3. Placing the branch conductor

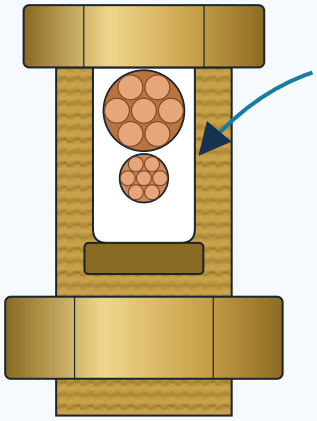


Place the branch conductor in the slot from the opposite side, next to the main conductor, and fit the nut by hand.

2. Insert the main conductor

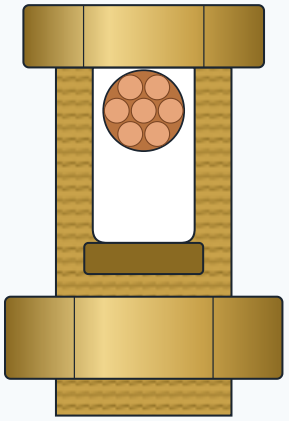

Undo the nut and place the main conductor in the bolt slot from one side.

1. Cleaning

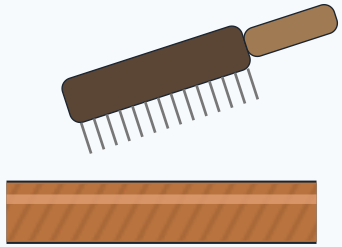

Clean the strands of both conductors with a wire brush down to bright copper.

A correctly tightened joint needs no periodic retightening; check its appearance and condition at inspections.

This document is not contractual; we may update product design, dimensions, weights and images without prior notice.

گروه کالوت
KALOT GROUP
Protect Today For Tomorrow
Since: 1972 تاسیس: ۱۳۵۱
www.kalot.ir · Tel +98 21 2268 8852