
Adjustable stainless steel air rod base: installation steps

KALOT technical illustration · right to left

SS · FLAT & PITCHED ROOF


KALOT GROUP · TECHNICAL ILLUSTRATION · NOT TO SCALE

1

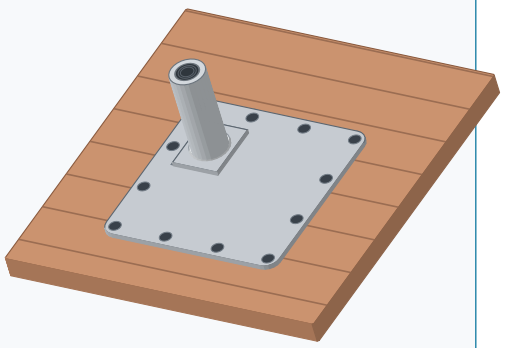


Place the plate on the roof and
fix it with suitable screws through the holes.

2

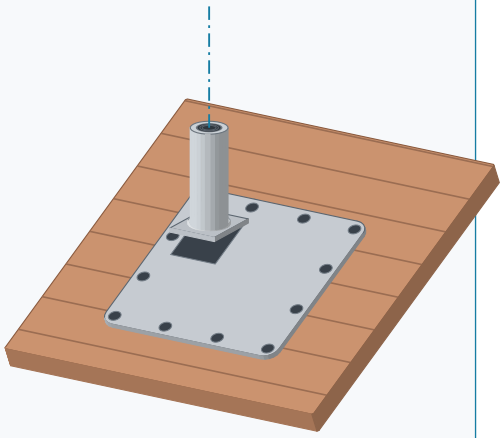


Bend the tab to the roof pitch
until the socket is fully vertical.

3

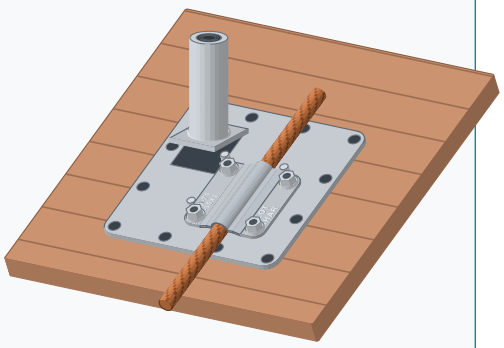

Place the conductor under the clamp jaw and
tighten the nuts evenly.

4

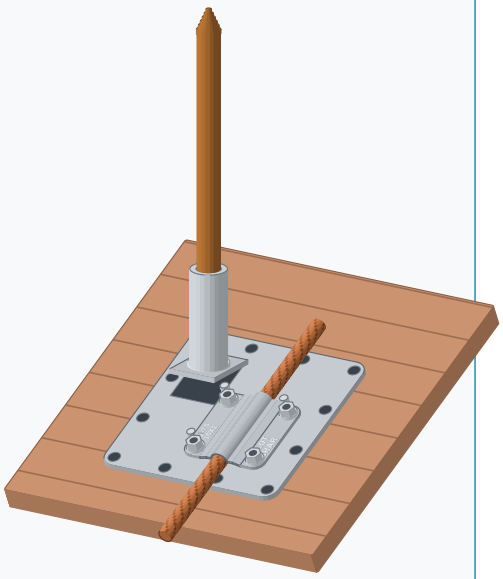

Screw the air rod into the socket
and tighten it firmly.

This document is not contractual; we may update product design, dimensions, weights and images without prior notice.

گروه کالوت
KALOT GROUP
Protect Today For Tomorrow
Since: 1972 تاسیس: ۱۳۵۱
www.kalot.ir · Tel +98 21 2268 8852