Two-piece stainless steel conductor-to-wall clamp: installation steps

KALOT technical illustration · right to left

SS · 50 / 70 mm²


KALOT GROUP · TECHNICAL ILLUSTRATION · NOT TO SCALE

1




Fix the base plate with one screw and wall plug
to the wall through the central hole.

2

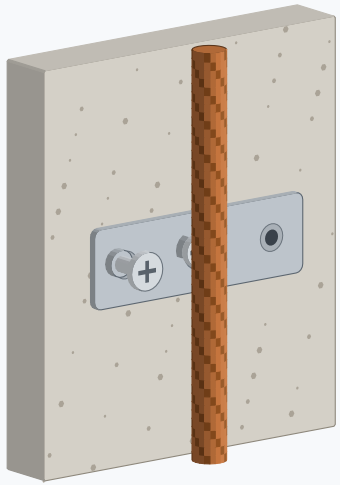


Run the conductor over the plate, across the central screw;
turn the slot-side screw a few turns into its insert.

3

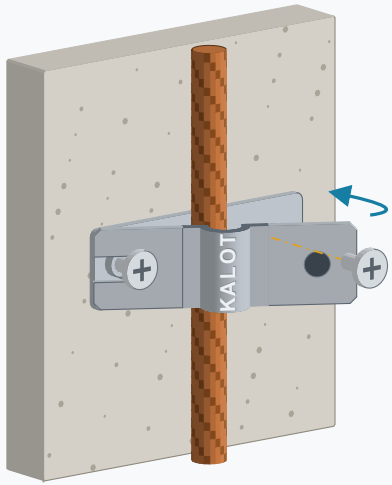

Slip the U slot of the cover under this screw head
and lay the cover over the conductor.

4

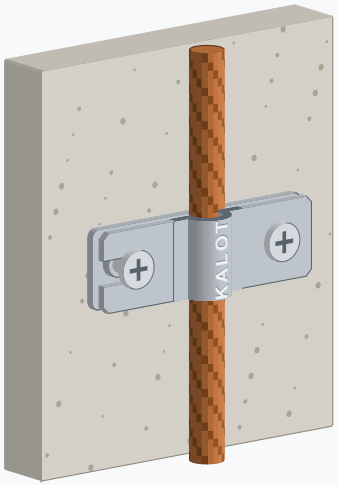

Fit the second screw and tighten both screws
gradually and evenly.

The U slot lets the cover drop into place without fully removing either screw, making work at height easier.

Once tightened, the conductor must not be loose in the clamp.

This document is not contractual; we may update product design, dimensions, weights and images without prior notice.

گروه کالوت
KALOT GROUP
Protect Today For Tomorrow
Since: 1972 تاسیس: ۱۳۵۱
www.kalot.ir · Tel +98 21 2268 8852