Stainless steel bonding point installation steps

Views not to scale

Ø80 × 2.5 · L 232.5 · M10 × 1.25


KALOT GROUP · TECHNICAL ILLUSTRATION · NOT TO SCALE

1. Fit the bar




Screw the stem fully into the sleeve behind the plate.

2. Nail to the formwork

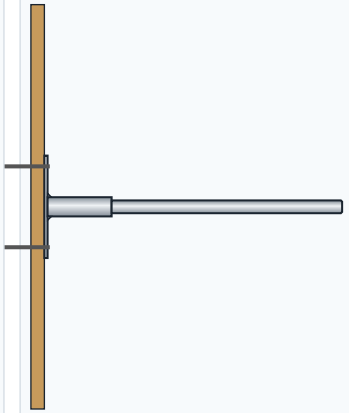


Nail the plate to the inner face of the formwork with three nails and plug the threaded hole.

3. Connect to the reinforcement

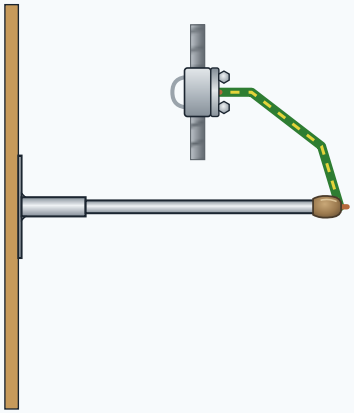


Exothermically weld the green and yellow conductor to the bar end and fix the other end to the reinforcing bar with a galvanised U clamp.

4. Pour the concrete

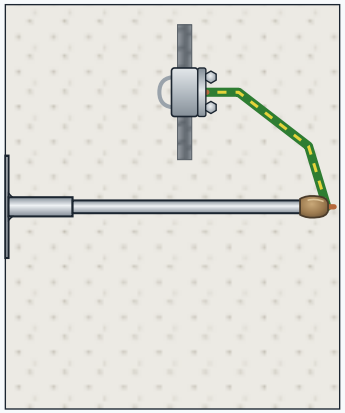

After pouring and stripping the formwork, the plate stays flush with the concrete.

5. Fit the cable lug

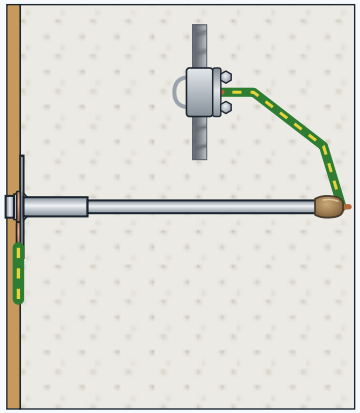

Fix the cable lug with an M10 × 1.25 bolt and tighten to the manufacturer's instructions.

This document is not contractual; we may update product design, dimensions, weights and images without prior notice.

گروه کالوت
KALOT GROUP
Protect Today For Tomorrow
Since: 1972 تاسیس: ۱۳۵۱
www.kalot.ir · Tel +98 21 2268 8852