Two-piece stainless tape wall clamp: installation steps

KALOT technical illustration · right to left

SS · TAPE 20–30 × 2–3 mm


KALOT GROUP · TECHNICAL ILLUSTRATION · NOT TO SCALE

1




Fix the base plate with one countersunk screw and wall plug to the wall through the central hole.

2

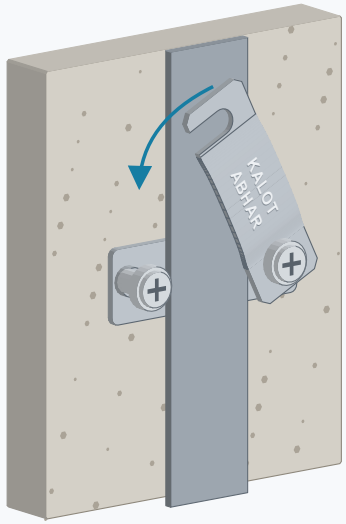


Swing the cover up on the first screw, run the second screw in a few turns and lay the tape on the plate.

3

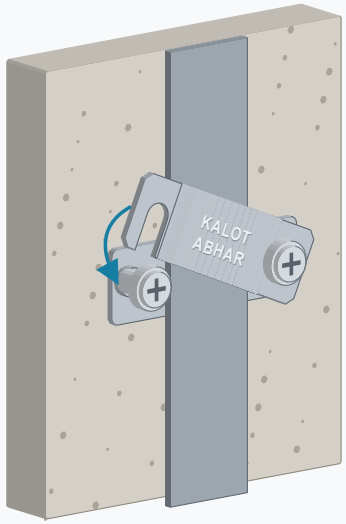

Lower the cover over the tape until the U slot sits down on the second screw.

4

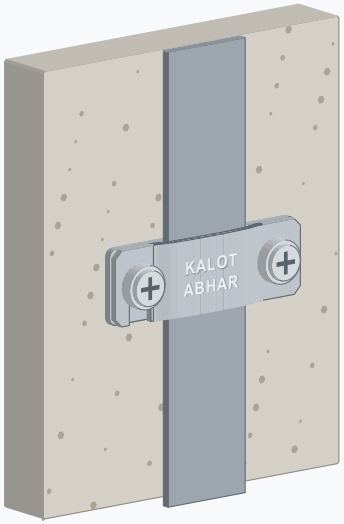

Tighten both screws gradually and evenly until the tape is held firmly.

This document is not contractual; we may update product design, dimensions, weights and images without prior notice.

گروه کالوت
KALOT GROUP
Protect Today For Tomorrow
Since: 1972 تاسیس: ۱۳۵۱
www.kalot.ir · Tel +98 21 2268 8852