
Installation steps for the steel bonding cylinder (earth bus)

Views not to scale

EBOS 5050 · EBOS 5040 · EBOS 5030 · EBOS 4040 · EBOS 4030


KALOT GROUP · TECHNICAL ILLUSTRATION · NOT TO SCALE

4. Fitting the cable lug

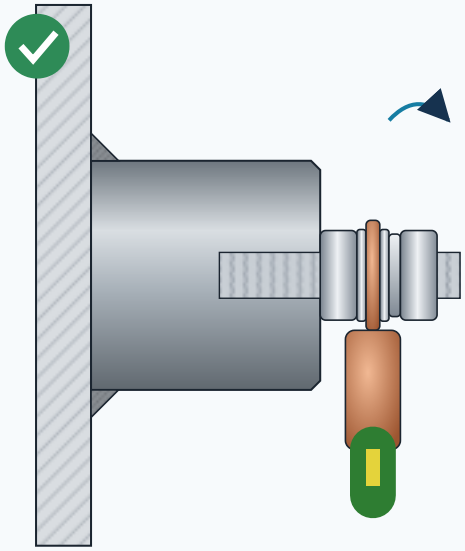


Fit the lock nut, washer, cable lug, washer, spring washer and nut, then tighten the nut to the manufacturer's instructions.

3. Weld protection

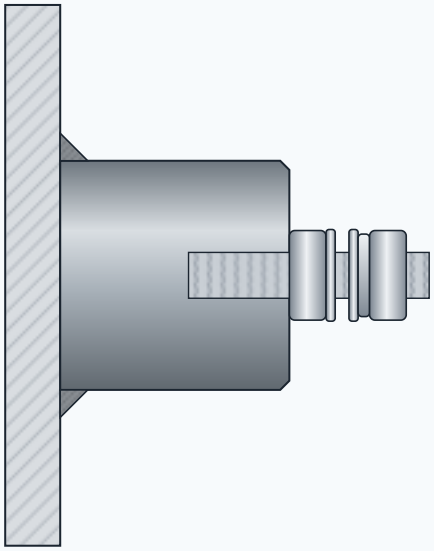


Remove the slag and cover the weld area with paint or anti-corrosion tape; keep the thread clean.

2. Welding

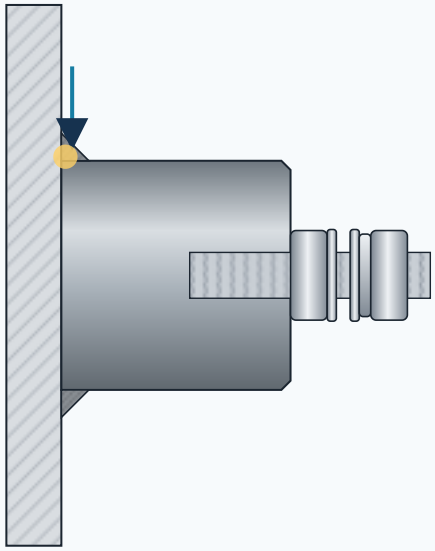

Place the flat end of the cylinder on the structure and run an all-round fillet weld to the welding procedure.

1. Surface preparation

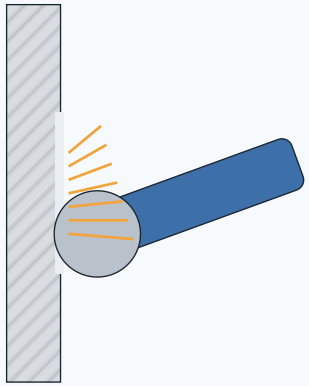

Grind the mounting spot on the structure to remove paint and rust and expose clean metal.

This document is not contractual; we may update product design, dimensions, weights and images without prior notice.

گروه کالوت
KALOT GROUP
Protect Today For Tomorrow
Since: 1972 تاسیس: ۱۳۵۱
www.kalot.ir · Tel +98 21 2268 8852