
Cable tie: models and lengths


Length and width to scale · nominal values

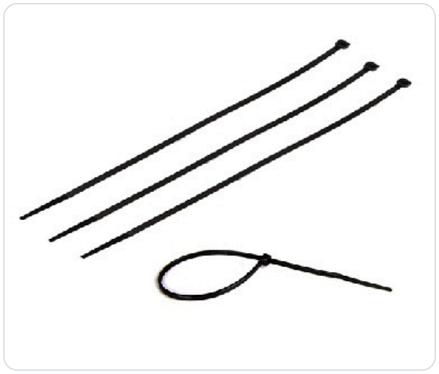


Product photo: plastic models


Length and width to scale (nominal values); lock head shape is illustrative

Stainless steel: TWS series

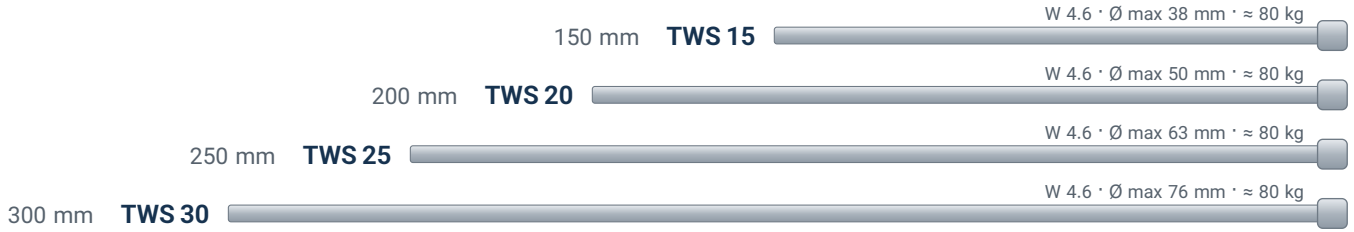

Plastic: TWP series

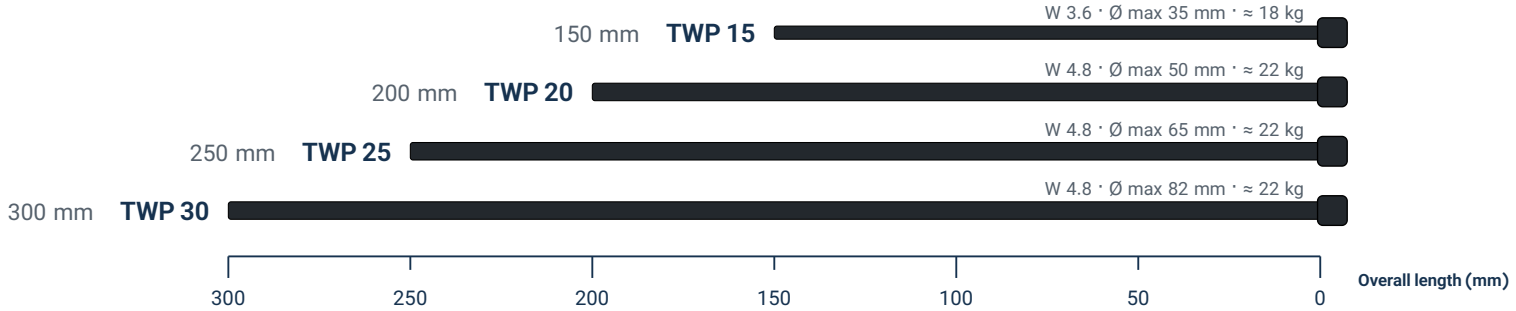

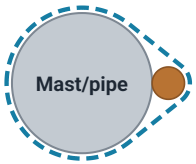

Loop length ≈ bundle circumference

+ lock head and tail length

Choosing the length

Measure the circumference of the "mast or pipe + conductor" bundle on site with a tape measure.

Choose a length that passes through the lock head after wrapping the bundle and leaves enough tail to pull.

Ø max = maximum bundle diameter; kg = loop tensile strength. Check with a sample on site before installation.

Length, material and order code are from the KALOT datasheet; other values are nominal.

TWS series in AISI 316 stainless steel, 0.25 mm thick, with ball lock; TWP series in UV-resistant black polyamide.

This document is not contractual; we may update product design, dimensions, weights and images without prior notice.

گروه کالوت
KALOT GROUP
Protect Today For Tomorrow
Since: 1972 تاسیس: ۱۳۵۱
www.kalot.ir · Tel +98 21 2268 8852