
Two-piece tape-to-pipe bonding clamp: exploded view

Order of parts on the bolt axis · not to scale


RWPB 026

KALOT GROUP · TECHNICAL ILLUSTRATION · NOT TO SCALE

Tape end, front view

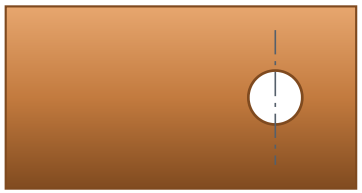

Bolt hole: one at each tape end

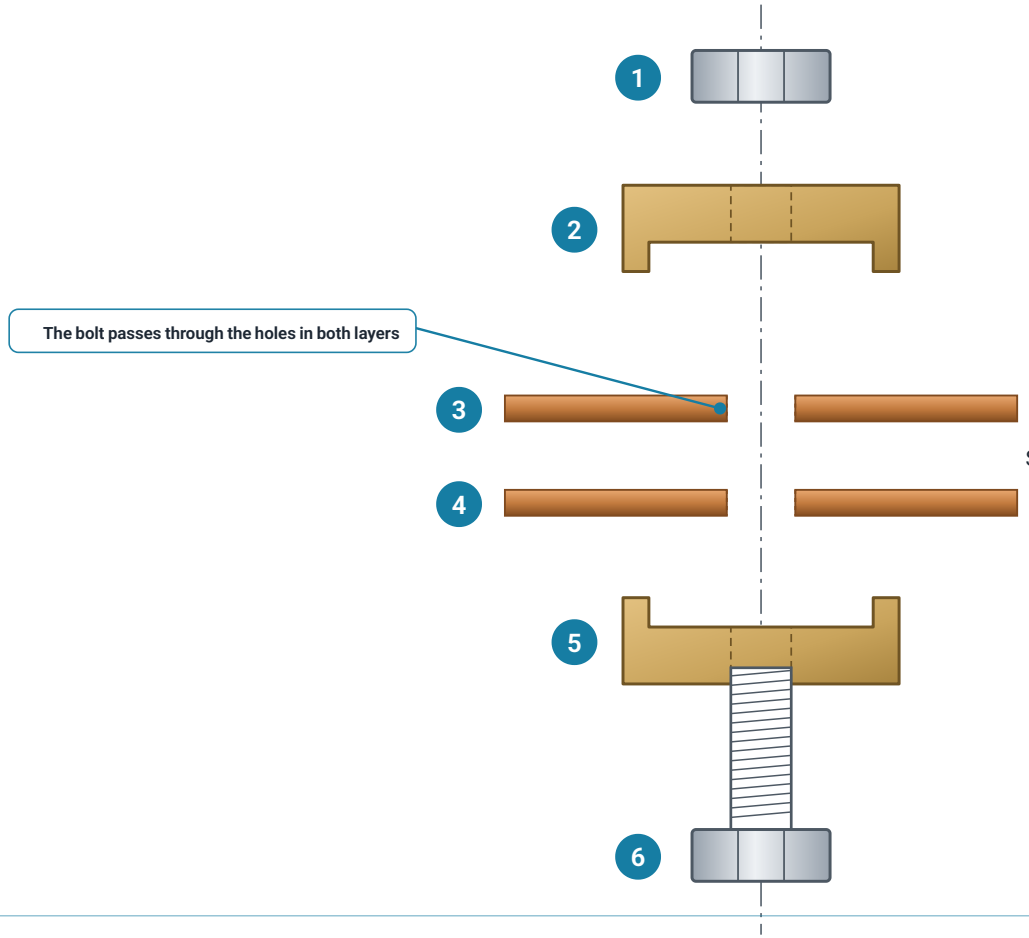

Assembly order on the bolt axis

1. Stainless steel nut
2. Upper jaw (brass)
3. First tape layer: drilled
4. Second tape layer: drilled
5. Lower jaw (same shape as upper jaw)
6. Stainless steel bolt (head at the bottom)

After assembling the parts, tighten the bolt evenly until the two jaws clamp the tape.

Schematic figure; drilling of both tape ends follows the KALOT product text.

This document is not contractual; we may update product design, dimensions, weights and images without prior notice.

گروه کالوت
KALOT GROUP
Protect Today For Tomorrow
Since: 1972 تاسیس: ۱۳۵۱
www.kalot.ir · Tel +98 21 2268 8852