
Installation steps for the galvanised U clamp

Views not to scale

UBCG 1450


KALOT GROUP · TECHNICAL ILLUSTRATION · NOT TO SCALE

5. Checking

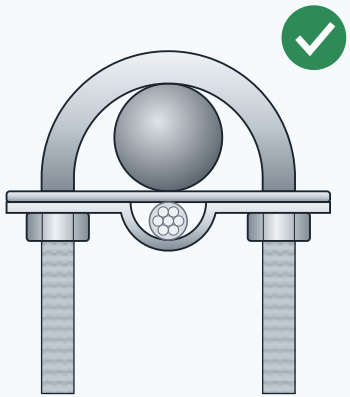


The conductor must sit fully in the channel and the two plates must be tight together.

4. Tightening the nuts

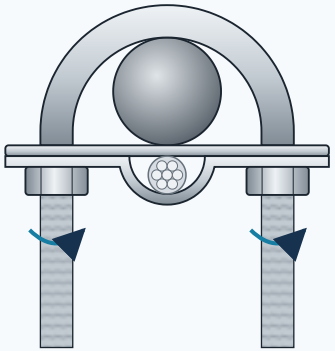


Fit the nuts by hand first, then tighten them with a spanner to the manufacturer's instructions.

3. Plate, conductor, plate

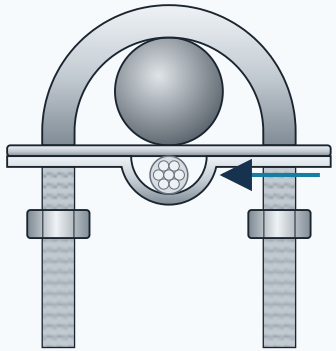


Seat the flat plate on the legs, lay the conductor in line with the earth rod and place the channel plate on top.

2. U-bolt around the earth rod

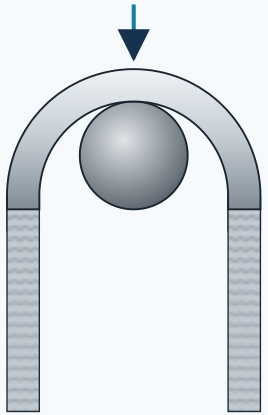

Undo the nuts and fit the U-bolt around the earth rod or reinforcing bar.

1. Cleaning

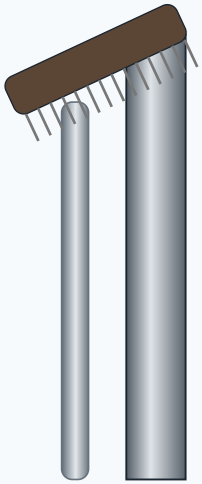

Remove mud, paint and any non-conductive layer from the contact surfaces of the earth rod or reinforcing bar and the conductor.

Views are along the reinforcing bar or earth rod; the galvanised or stainless steel conductor sits in line with it in the front plate channel. Do not use this clamp with copper conductors or copper earth rods.

This document is not contractual; we may update product design, dimensions, weights and images without prior notice.

گروه کالوت
KALOT GROUP
Protect Today For Tomorrow
Since: 1972 تاسیس: ۱۳۵۱
www.kalot.ir · Tel +98 21 2268 8852