
Installation steps for the U clamp for connecting vertical tape to earth rod and reinforcing bar

UBDP 16 · UBDP 25 · UBDP 31 · UBDP 38 · UBDP 50

KALOT GROUP · TECHNICAL ILLUSTRATION · NOT TO SCALE


Views not to scale

1. Cleaning

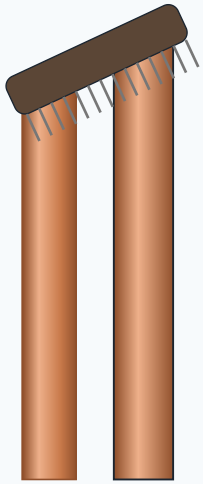


Remove paint, rust, mud and any non-conductive layer from the contact surfaces of the earth rod or reinforcing bar and the tape.

2. U-bolt around the earth rod

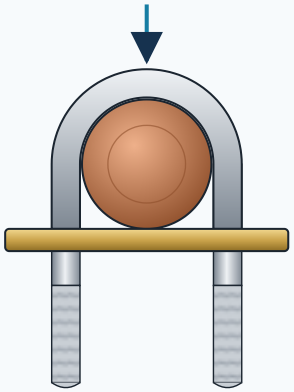


Undo the nuts and bottom plate and fit the U-bolt around the earth rod so it sits on the top plate.

3. Tape on the top plate

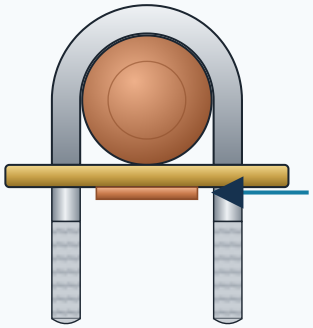


Lay the tape vertically on the top plate, in line with the earth rod.

4. Bottom plate and nuts

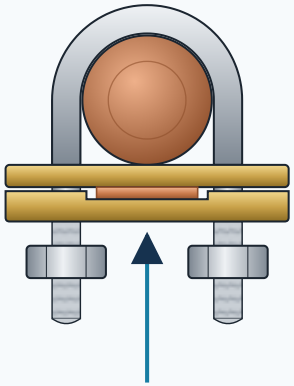

Fit the bottom plate so the tape sits in its groove, and fit the nuts by hand.

5. Tightening and checking

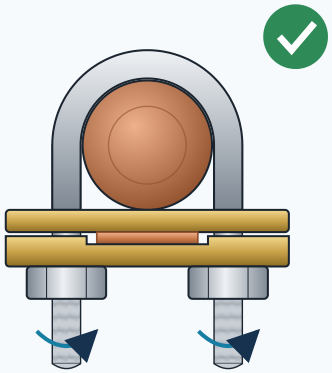

Tighten the nuts evenly and in turn to the manufacturer's instructions, and check that the tape is seated.

Views are along the earth rod, with the tape seen from the front (cut away); the tape, vertical and in line with the earth rod, sits in the groove of the bottom plate and is not drilled.

This document is not contractual; we may update product design, dimensions, weights and images without prior notice.

گروه کالوت
KALOT GROUP
Protect Today For Tomorrow
Since: 1972 تاسیس: ۱۳۵۱
www.kalot.ir · Tel +98 21 2268 8852